

DENON DN-HC1000S - FX PRESET

# MIDI PRESET GUIDE

# DENON DN-HC1000S


serato



SCRATCH LIVE

## Getting Started.

1. Download the appropriate MIDI preset file for your device
2. Drag and drop the MIDI preset file into your `_Serato_` folder using your file manager to the following location:
  - Mac: Users > Music > `_Serato_` > MIDI
  - Windows: MyDocuments > MyMusic > `_Serato_` > MIDI
3. Open Scratch Live, enter the Setup screen and go to the MIDI tab.
4. Make sure the Enable MIDI Device and Enable MIDI Output lighting options are checked then select the MIDI preset from the available list. Click Load to load the mapping.
5. To use the mapping you have just loaded, press and hold SHIFT + BROWSE to switch your Denon DN-HC1000S to MIDI layer 2.

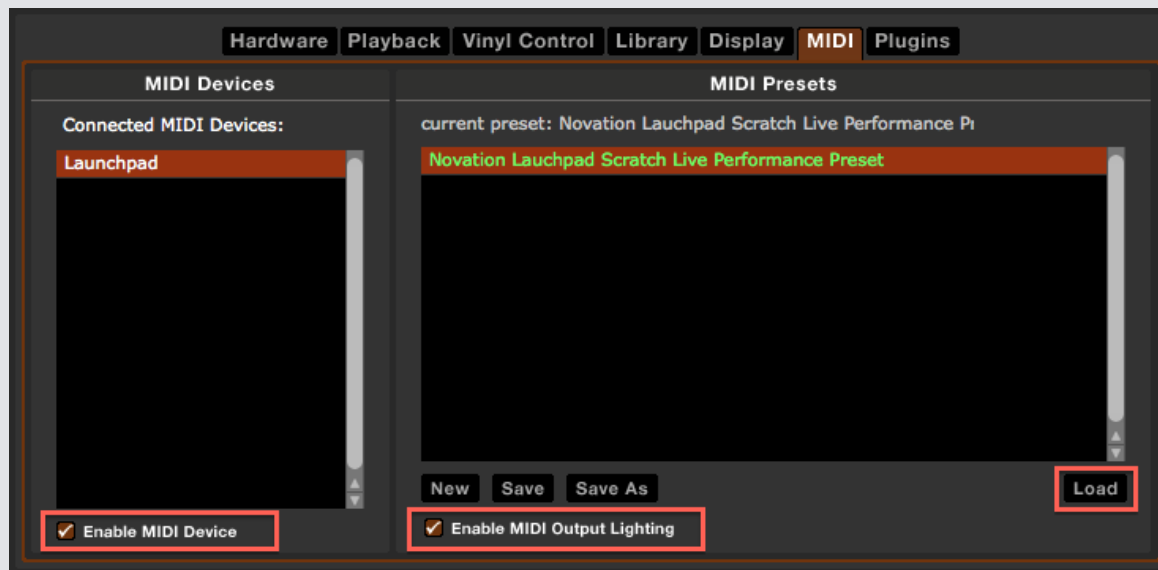

## DENON DN-HC1000S - FX PRESET

The below diagram outlines the FX Preset functions for the Denon DN-HC1000S. Supported with Scratch Live 2.5.



serato

SCRATCH LIVE

## DENON DN-HC1000S - FX PRESET

#	DENON DN-HC1000S	Function	Shift Function
1	Roll	Loop Roll On/Off	-
2	In	Loop In set/adjust	-
3	Loop Cut Knob	Ultra Knob wet/dry	Effect Select
3a	Push	Ultra Knob Effect on/off	Select Ultra Knob mode
4	Out	Loop Out set/adjust	-
5	Auto Loop	Auto Loop on/off	-
6	Loop	Manual Loop on/off	-
7	Cue-1	Auto Loop 1/16 beat	Loop Roll 1/16 beat
8	Cue-2	Auto Loop 1/8 beat	Loop Roll 1/8 beat
9	Cue-3	Auto Loop 1/4 beat	Loop Roll 1/4 beat
10	Back	Navigate backward through open panels	-
11	Load A	Load to deck 1	Instant Double Deck 1
12	File Select Knob	Library Scroll	-
12a	Push	Cycles between Files/Browse/History/Prepare panels	Recording start/stop
13	Load B	Load to deck 2	Instant Double deck 2
14	FWD	Navigate forward through open panels	-
15	Censor	Censor	Key Lock on/off
16	Bend Down	Decreases FX tempo	Effects Source Deck 1 (FX Unit1)
17	Bend Down	Increases FX tempo	Effects Source Deck 2 (FX Unit1)
18	TAP	Tap tempo	-
19	Previous Track	Load previous track	Effects Source Deck 3 (FX Unit1)
20	Next Track	Load next track	Effects Source Deck 4 (FX Unit1)

## DENON DN-HC1000S - FX PRESET

#	DENON DN-HC1000S	Function	Shift Function
21	SAMP	Effect panel open/close	-
22	Cue-5	Auto Loop 1 beat	Loop Roll 1 beat
23	Cue-6	Auto Loop 1/2 beat	Loop Roll 1/2 beat
24	Files	Open the Files panel	Changes to MIDI channel 1
25	Browse	Open the Browse panel	Changes to MIDI channel 2
26	Shift	Shift	-
27	History	Open the History panel	Change to MIDI channel 3
28	Prepare	Open the Prepare panel	Change to MIDI channel 4