

QUICK-START GUIDE

Denon MC6000MK2

serato




DJ INTRO

Installation and Setup

The Denon MC6000MK2 is a class compliant USB plug and play device for Mac, however requires drivers for Windows. You will find these on the installation CD provided with your Denon MC6000MK2.


NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ Intro. Please go to <http://serato.com/dj-intro/support>

1. Download and install the latest version of Serato DJ Intro from <http://serato.com/dj-intro/downloads>
2. Connect your Denon MC6000MK2 to an available USB Port.
3. Open Serato DJ Intro.

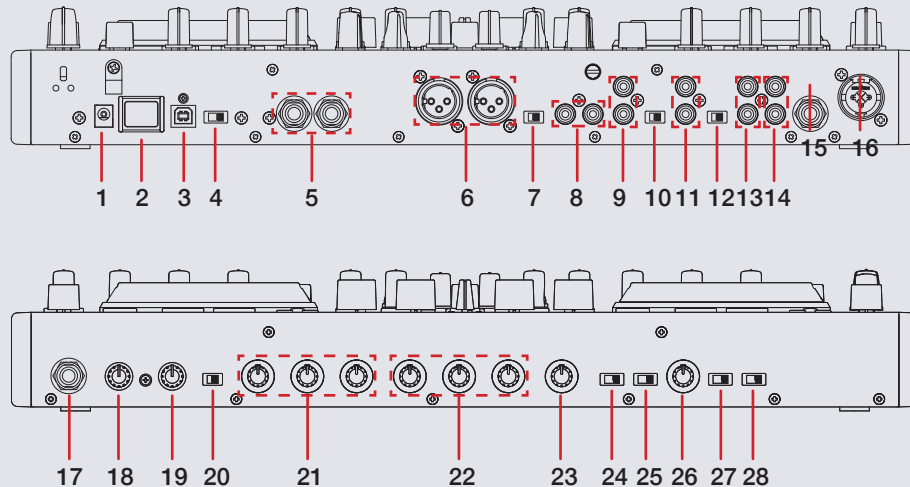

#	Denon MC6000MK2 Control
1	DV 12V Power input
2	Controller ON/OFF
3	USB 2.0 Input
4	USB Audio line select switch
5	Balanced Booth Output L/R
6	Balanced Master XLR Output L/R
7	Mono/Stereo switch
8	Unbalanced RCA Master Output
9	Line 4 L/R Input
10	Phono/Line Switch
11	Line 3 L/R Input
12	Phono/Line Switch
13	Line 2 L/R Input
14	Line 1 L/R Input
15	MIC 2 TRS Input
16	MIC 1 XLR Input
17	Headphones Input
18	Headphone volume
19	Cue/Master volume
20	Split Cue switch
21	MIC 1 EQ LOW/MID/HI
22	MIC 2 EQ LOW/MID/HI
23	MIC Echo
24	Fader Assignment CH3 L/Thur/R
25	Fader Assignment CH1 L/Thur/R
26	X Fader Curve Dial
27	Fader Assignment CH 2 L/Thur/R
28	Fader Assignment CH 4 L/Thur/R

Controller

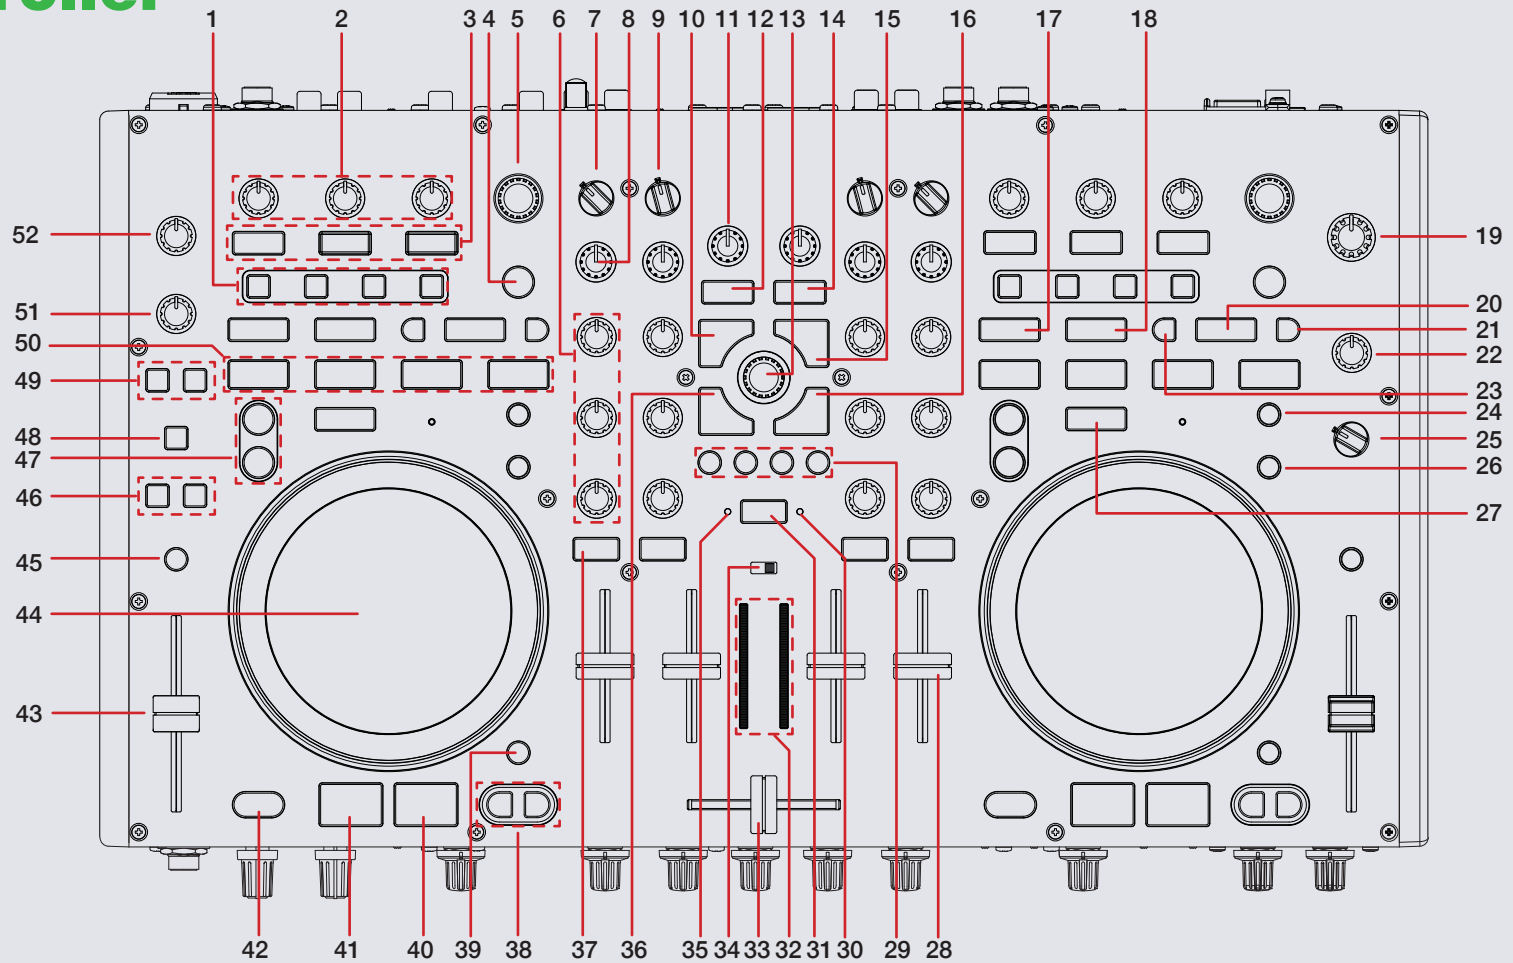

NOTE: The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Denon MC6000MK2 Control	Function	Shift Function
1	CH ASSIGN	N/A	
2	FX KNOBS	Adjust Slot 1-3 FX Parameter	Turn Knob 1 (Select Effect in Slot 1), Turn Knob 2 (Select Effect in Slot 2), Turn Knob 3 (Select Effect in Slot 1)
3	FX BUTTONS (P1,2,3)	Slot 1-3 Effect On/Off	Button 1 (Select Effect in Slot 1), Button 2 (Select Effect in Slot 2), Button 3 (Select Effect in Slot 1)
4	TAP	Tap to set desired BPM/hold to reset	
5	BEATS	Turn to adjust Beats Multiplier setting/ push down to reset to 1/1	
6	EQ (knobs)	Adjust HI, MID and LOW	
7	INPUT SELECT	Toggles between available Line channels LN3, LN1, LN2, LN4 and PC mode	
8	CH LEVEL	Toggles focus between library, crates and open panels	
9	INPUT SELECT	Toggles between available Line channel LN1 and PC mode	
10	LOAD	Load selected track to Deck 1 (Press twice to Instant Double)	
11	FILTER	LP/HP filter combo adjust for channel 1	
12	FILTER ON	Turn filter combo on/off for channel 1	
13	BROWSER	Browses through currently focused area (library/crates/open panels) Click to move between library and crates	
14	FILTER ON	Turn filter combo on/off for channel 2	
15	LOAD	Load selected track to Deck 2 (Press twice to Instant Double)	
16	FWD	Toggles focus between library, crates and open panels	
17	IN	Set loop in point (Loop not active)/Adjust loop in point (Loop active)	
18	OUT	Set loop out point (Loop in point set)/Adjust loop out point (Loop active)	
19	MASTER LEVEL	Adjusts the master output's audio level	

NOTE: The **SHIFT** button is used with other buttons that have shift modifier functions.

#	Denon MC6000MK2 Control	Function	Shift Function
23	+	Double Auto Loop Length	
24	HOT CUE/SAMPLE	Set/Trigger Cue (1,2,3,4) /Sample trigger (1,2,3,4)	Delete Cue 1,2,3,4/ Shift + Sample + 1,2,3,4 stops sample playback
25	BOOTH ASSIGN	Set booth assign to channel output 1,2,3,4 or master output	
26	CENSOR/SLIP	N/A	
27	SHIFT	SHIFT button is used with other buttons that have shift modifier functions	
28	CHANNEL FADERS	Adjusts the Channel Output	
29	PANEL/VIEW/AREA/LIST	N/A	
30	VIDEO LED	N/A	
31	X-F LINK	N/A	
32	LED METER	Monitors the audio levels of the assigned Output (see LED METER ASSIGN for more detail)	
33	CROSSFADER	Crossfades the output sound between Deck 1 & 2	
34	LED METER ASSIGN	LED meter assigning for CH1/2, CH3/4 or MASTER outputs	
35	AUDIO LED	N/A	
36	BACK	Toggles focus between library, crates and open panels	
37	CUE	Cue selected channel in headphones	
38	PITCH BEND +/-	Press or hold down either of these buttons to temporarily adjust the track's playback speed. When released, the track playback will return to the speed designated by the PITCH FADER.	
39	VINYL	Toggles between Vinyl/Jog Modes	
40	PLAY/PAUSE	Play/Pause track	
41	CUE	Add or Jump to Temporary Cue	

#	Denon MC6000MK2 Control	Function	Shift Function
42	SYNC	Sync On	Sync Off (Press twice to return to Absolute Pitch when in Relative Mode)
43	PITCH FADER	Adjust Pitch	When in Sync mode, used to disable the Pitch Fader temporarily and change the zero position
44	PLATTER	Adjust/Scratch or Jog	Search
45	KEYLOCK	Enable Keylock	Cycle through available Tempo Range
46	ECHO ON 1/2	Enable Mic Echo on/off either channel 1 or 2	
47	DUCKING	Lowers master signal when pressed down/will stop ducking on release	
48	DECK LAYER ASSIGN	N/A	
49	MIC ON 1/2	Turn on/off MIC channel 1 or 2	
50	HOT CUE MODE	Activates Hot Cue (1-4)	
51	MIC 2 LEVEL KNOB	Turn to adjust MIC 2 level	
52	MIC 1 LEVEL KNOB	Turn to adjust MIC 1 level	



Looping

You have the choice of Auto or Manual looping within Serato DJ Intro with the Denon MC6000MK2.

Denon MC6000MK2 Control	Manual Loop Mode
IN	Set loop in point (Loop not active)
IN	Edit start of loop point with platter (Loop active)
OUT	Set end of loop point (If Loop in point set)
OUT	Edit end of loop point (Loop active)
AUTO LOOP	Exit Manual Loop

NOTE: The best way to edit the start and end points of a manual loop is with the jog wheel/platter on your Denon MC6000MK2.

 
Denon MC6000MK2 Control	Auto Loop Mode
AUTO LOOP	Start Auto Loop
-	Halve Auto Loop length
+	Double Auto Loop length

 
DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Denon MC6000MK2

Denon MC6000MK2 Control	Serato DJ function	Shift
FX P1 BUTTON	Slot 1 Effect On/Off	Slot 1 Select Effect
FX P2 BUTTON	Slot 2 Effect On/Off	Slot 2 Select Effect
FX P3 BUTTON	Slot 3 Effect On/Off	Slot 3 Select Effect
FX KNOBS	Adjust FX Parameter (1-3)	Adjust Beats Multiplier
FX BEATS KNOB	Adjust Beats Multiplier	

Using the Tool Tips

Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Software Manual.

For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

serato



DJ INTRO