

QUICK-START GUIDE NUMARK MIXTRACK PRO III

serato



DJ INTRO

Installation and Setup

The Numark Mixtrack Pro III requires drivers for both Mac and Windows. You will find these on the installation CD that is provided with your Numark Mixtrack Pro III, or go to <http://www.numark.com>

NOTE: Please ensure you have the latest available drivers AND firmware updates, which may be required in order to be compatible with Serato DJ Intro. Please go to <http://serato.com/support> or visit the Numark website.

 
1. Download and install the latest version of Serato DJ Intro from <http://serato.com/dj/downloads>
2. Connect your Numark Mixtrack Pro III to an available USB Port.
3. Open Serato DJ Intro.

serato



DJ INTRO


Controller

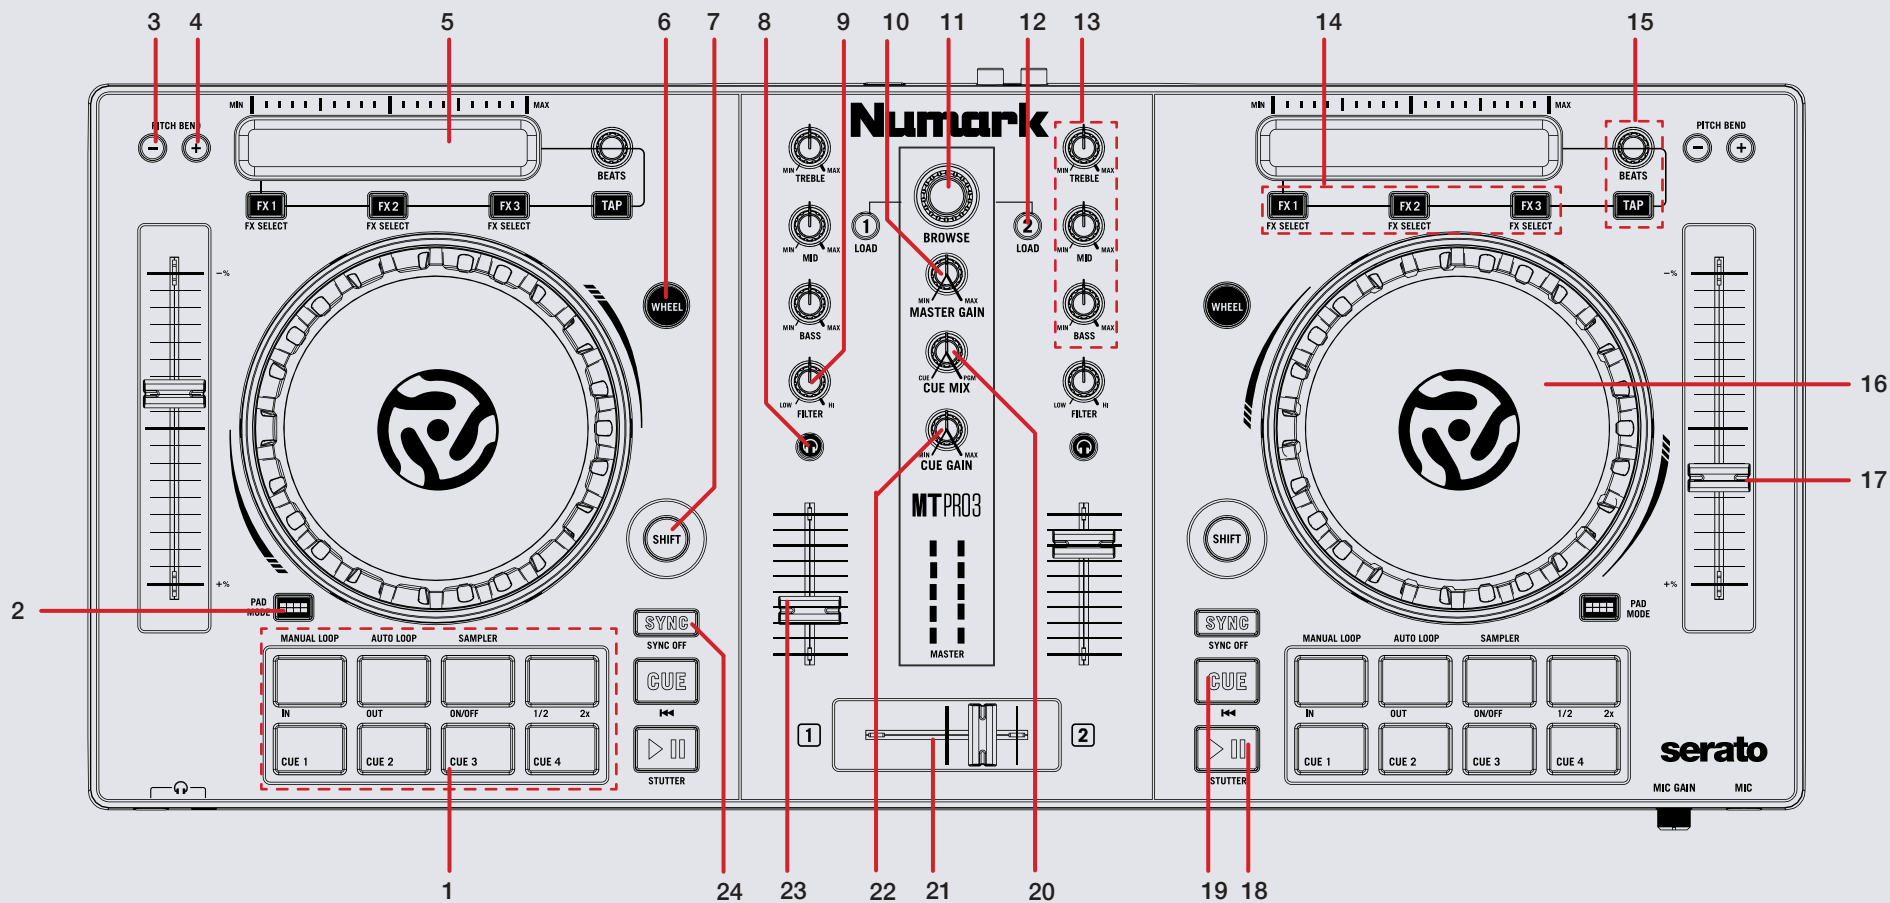

NOTE: The SHIFT button is used with other buttons that have shift modifier functions.


#	Mixtrack Pro III	Serato DJ Intro Function	Shift
1	PERFORMANCE PADS	SEE PERFORMANCE PAD SECTION FOR MORE INFORMATION	
2	PAD MODE	Change Performance Pad mode	
3	PITCH NUDGE -	Pitch nudge backward	
4	PITCH NUDGE +	Pitch nudge forward	
5	TOUCH STRIP	Adjust FX parameter	Skip search through track
6	SCRATCH	Turn Scratch mode on for the platters	
7	SHIFT	Used with other controls that have shift modifier functions	
8	PFL CUE	Enable to monitor the channel through the headphones	
9	HP/LP FILTER	Channel HP/LP filter	
10	MASTER GAIN	Adjust master output gain	
11	BROWSE	Scroll to browse library or crate lists. Push to go Back	
12	LOAD DECK	Load currently highlighted track to respective deck	
13	CHANNEL EQ	Adjust channel EQ	
14	FX 1-3	FX 1-3 On/Off or adjust Parameter	FX select
15	BEATS MULTIPLIER	Adjust beats multiplier timing. Tap tempo.	
16	PLATTER	Adjust tempo or scratch currently loaded track	
17	TEMPO FADER	Adjust playback tempo of currently loaded track	
18	PLAY/PAUSE	Play or pause currently loaded track	
19	CUE	Set/play from temporary cue	
20	CUE MIX	Adjust Cue Mix	
21	CROSSFADER	Fade audio between channels	
22	CUE GAIN	Adjust headphone volume	
23	CHANNEL FADER	Adjust channel volume	
24	SYNC	SYNC On	SYNC Off



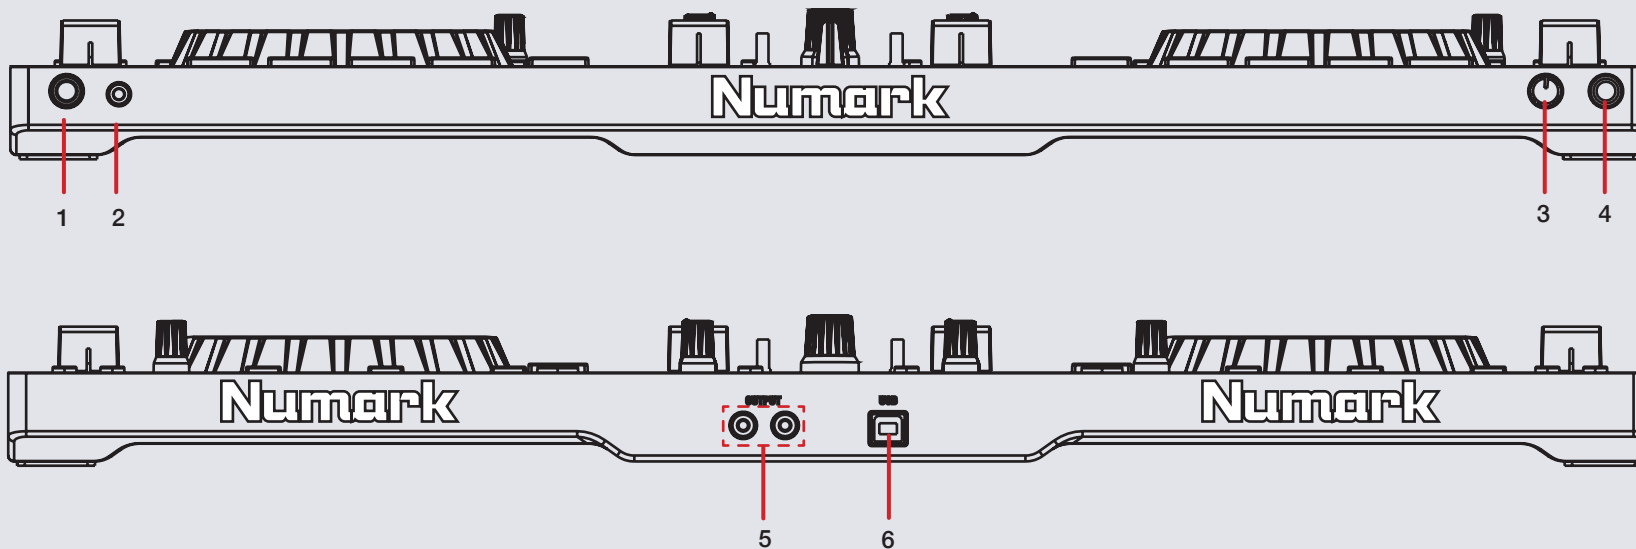 

#	Numark Mixtrack Pro III	Function
1	1/4" HEADPHONES	Connect your 1/4" headphones to this output for cueing
2	1/8" HEADPHONES	Connect your 1/8" headphones to this output for cueing
3	MIC GAIN	Adjust the input volume of the Mic
4	MIC	Connect an TRS or 1/4" jack microphone to this input
5	MASTER RCA OUTPUT	Use standard RCA cables to connect this output to a speaker or powered monitors
6	USB	Connect USB cable to this port from computer

 Performance Pads

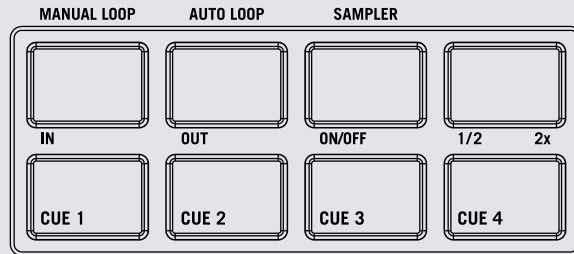

The bottom row of pads is dedicated to Cue Points:

- **CUES 1-4:** Pressing the bottom 4 pads will add up to 4 Cue Points. Holding **SHIFT** and pressing the Cue pads will delete the Cue Points.

The top row of performance pads have different modes you can select. They are Manual Loop mode, Auto Loop mode and Sampler mode. Hold the **PAD MODE** button and press pads 1-3 to enable each performance pad mode.


- **AUTO 1/Manual Loop mode:** Pressing pad 1 will start and set a Manual Loop In point, pad 2 will set the Loop Out point and pads 3 and 4 will turn the Loop On/Off and Retrigger the loop.
- **AUTO 2/Auto Loop mode:** When pressing pads 1-4 you can activate Auto Loops of different sizes. Hold Shift and press pads 1-4 to enable Loop Rolls of that size.
- **AUTO 3/Sampler Mode:** Pads 1-4 will trigger samples loaded in slots 1-4 of your Sample Banks. Holding **SHIFT** and pressing pads 1-4 will stop the sample playing. If a sample slot is empty, pressing the pads 1-4 will load the currently selected track in library to the corresponding sample slot.


DJ-FX

You can have up to three different effects active per Virtual deck within Serato DJ Intro with the Mixtrack Pro III.

Mixtrack Pro III Control	Serato DJ Intro function	Shift
FX 1-3	Turn FX slot On	Select next FX in slot
FX 2	Adjust FX parameter 1	Select next FX in slot
FX 3	Adjust FX parameter 2	Select next FX in slot
TAP	Tap DJ-FX tempo	N/A
BEATS	Adjust beats timing multiplier	N/A
TOUCH STRIP	Adjust FX depth	Skip search track

Using the Tool Tips

 Click on the  icon to enable Tool Tips. This is located in next to the setup button in the top right hand corner of the screen. Tool Tips provide a handy way to learn the various features of Serato DJ Intro Intro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip. Holding the mouse over the  button with Tool Tips turned on will show you a list of all keyboard shortcuts.

For more information about how to use Serato DJ Intro Intro, please go to our website www.serato.com or refer to the Serato DJ Intro Intro Software Manual. For more information on your controller, please refer to the hardware manual.

For further help, please contact support@serato.com or go to www.serato.com/dj-intro/support

