

MIDI PRESET GUIDE

NOVATION LAUNCHPAD

NOVATION LAUNCHPAD - PERFORMANCE PRESET

The below diagram outlines the Performance Preset functions for the Novation Launchpad. Supported with Scratch Live 2.5.



serato

SCRATCH LIVE

NOVATION LAUNCHPAD - PERFORMANCE PRESET

#	Deck 1
1	Loop on/off
2	Auto loop 1 beat
3	Auto loop 2 beats
4	Auto loop 4 beats
5	Auto loop 8 beats
6	Auto loop 16 beats
7	Loop roll 1/16 beat
8	Loop roll 1/8 beat
9	Loop roll 1/4 beat
10	Loop roll 1/2 beat
11	Loop roll 1 beat
12	Delete cue (press & hold to delete)
13	Add/trigger cue point 1
14	Add/trigger cue point 2
15	Add/trigger cue point 3
16	Add/trigger cue point 4
17	Add/trigger cue point 5
18	Instant double
#	Deck 2
19	Same functions as Deck 1

#	SP6
20	Sample bank A
21	Sample bank B
22	Sample bank C
23	Sample bank D
24	Trigger Sample Slot 1
25	Trigger Sample Slot 2
26	Trigger Sample Slot 3
27	Trigger Sample Slot 4
28	Trigger Sample Slot 5
29	Trigger Sample Slot 6

#	FX
30	Effect 1 on/off (FX Unit 1)
31	Effect 2 on/off (FX Unit 1)
32	Effect 3 on/off (FX Unit 1)
33	Effects Source Deck 1 (FX Unit 1)
34	Effects Source Deck 2 (FX Unit 1)
35	Effect 1 on/off (FX Unit 2)
36	Effect 2 on/off (FX Unit 2)
37	Effect 3 on/off (FX Unit 2)
38	Effects Source Deck 1 (FX Unit 2)
39	Effects Source Deck 2 (FX Unit 2)